

Attach chain link fabric to braces, top rail, tension wire, and intermediate posts at intervals of 12 inches maximum.

Refer to MI-104 for fencing at Channel Crossings, Minor Ground Depressions, and Flood Plains.

- Fabric width will be 6 feet unless specified otherwise.
  - 2 Unless specified otherwise, install gates 16 feet in width. Double gate (shown) is required only for widths more than 16 feet. Exact details of gate design are subject to approval of the Engineer. Furnish gate with approved stop, latch and means for locking. Install as recommended by the manufacturer.
  - 3 End Post used to terminate run of fence if no gate is proposed.

10'-0" (4) P -Post s Spacing (5) C

Place fence fabric on roadway side of post. For stream crossings place fabric on the upstream side of the post.

) Connect bottom tension wire to end posts, angle posts, and pull posts. Install a turnbuckle or other approved tightening device on each continuous span of tension wire.

(6) Refer to Post Installation detail.

Possible Contract Items: Chain Link Fence Chain Link Gate Assembly

|   |                                  | REVISION     |          |
|---|----------------------------------|--------------|----------|
|   |                                  | 3            | 10-20-15 |
|   |                                  | КЛI          | 102      |
| STANDARD ROAD PLAN MI-102   |                                  |              | IVZ      |
|   |                                  | SHEET 1 of 2 |          |
| REVISIONS: Replaced the DOT logo in the title block with the new version. |                                  |              |          |
|   | APPROVED BY DESIGN METHODS ENGIN | NEER         |          |
| СНА   | AIN LINK FENCE CONST             | RUCTI        | ON       |

