Topcon Settings

NTRIP Settings:

From the Home Screen click Configuration.



Click Survey



In the GNSS Configuration click Edit.

M	Job Configuration		
Opt	tical Configuration		
9	<default></default>		
			Edit Select from Library
_ GNS	SS Configuration ———		
	Hiper IaRTN		
			Edit Select from Library
	Configuration		
	Name	IaRTN	
	Туре	Network RTK	•
	Corrections	MAC	•
	Protocol	NTRIP 2.0/1.0	•
			Next >>

Click Next

Receiver Make		\checkmark	X
Simulation Mode Rover Manufacturer	Topcon		
Post Processing			
	<< Back	lext >>	

Click Next

Rover Receiver	\checkmark ×
External Receiver	Bluetooth
Receiver Model	HiPer HR
Serial Number	
Elevation Mask	13 deg
Antenna	HiPer HR
The Ant Height	6.562 USft
Peripherals	<< Back Next >>

Click Next

Rover Radio			\checkmark X
Connect to	Receiver	Controller	
Type Model	Internal Cellular Existing Network C	onnection	•
		<< Back	Next >>

Click Next

Internet A	ddress		\checkmark X
Label	Address		
Add	Edit	Delete	
		<< Back	Next >>
Add	Edit	Delete << Back	Next >>

Click Add

Edit Internet Address		\checkmark	×
Label	IARTN		
Address	165.206.203.10:10000]	
Login	NTRIP_username		
Password	NTRIP_password		

Label the connection IaRTN. Enter the IP address and port number. User your NTRIP username and password from SBC. Click the green check mark.

Μ	Internet A	ddress	\checkmark	X
La	ibel	Address		
	IARTN	165.206.203.10:10000		
	Add	Edit Delete		
		<< Back Ne	ext >>	

Click Next.

Position in GG	A					\checkmark	X
	Automatic Rove	er Pos					
	Select point						
	_ WGS84(m)						
	Lat	0°00	00.000	000"			
	Lon	0°00'	00.000)00"			
	Ellipsoidal ht	0.000)				
	Remind when c	connect	ing to	VRS mount point			
				<< Back	N	ext >>	

Check 'Automatic Rover Pos' this step will send the GGA message to the RTN server when you log in.

Click Next

** The next 9 screens are to be set up according to your preferences. **

On the Tacking screen check on the constellations that are available according to your equipment.

Tracking	
Use GPS	✓ Use GLONASS
✓ Use BDS	✓ Use Galileo
✓ Use QZSS	Use NavIC
✓ Use SBAS	
Use all signals	
	<< Back Next >>

Click Next through the last windows or click the green check mark in the top right corner to finish the set up.

Mount Point List:

From the Home screen click Connect



Click Connect

Connections		× 🗘 📩
General Enterprise		
Hybrid Positionin	g™	
Optical	<default></default>	
GNSS	My Network RTK	🚯
Connect to last	used BT device	
Prompt for conn	ection at startup	
	Connect	

Select the mount point from the list.

Connections	~~
General Enterprise Network	
Maunt Dainte Deguart	
Mount Points Request	
✓ NTRIP Caster Connection	
IaRTN (165.206.203.10:10000)	
RTK_DEMO_MP;0;0;0;GPS+GLO;N/A;0;RTCM 3.0;0;NTRIP;STR;	- <i>i</i> - S
Connected to the caster.	^
	~
Stop	Disconnect